


**NOTE:** This Calibrator is suitable to confirm the accuracy of tachometers only. A separate test unit is required to verify that Tachometers will work at a specified distance from a target

**WARNING** This equipment is class I and must be earthed.

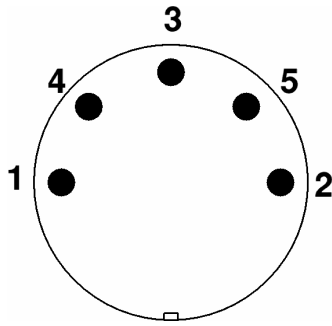

**Output Din Connector (front view)**

- Pin 1 LED Drive (-ve)
- Pin 2 Pulse Out ( 0 – 2.5v)
- Pin 3 5v in from "CT" (drives internal LED if present)
- Pin 4 LED Drive (+ve)
- Pin 5 0v from "CT" (drives internal LED if present)

## Operating Instruction

**Model MT2013**

**Tachometer Calibrator**

## Tachometer Calibrator

### Model MT2013

#### General description

The MT2013 Tachometer Calibrator has all the features required to calibrate any optical tachometer. In addition the unit is equipped with inputs and outputs which enable the calibration of external VLS series optical sensors and all functions of the connected Tachometer.

#### Display features & Specification

Display - LED 5 digit  
Display functions - Auto ranging 0 – 99999 RPM and over range indication.  
The display will stop at 99999 and flash to indicate the over range condition. If no input pulses are detected the on-target LED will turn off and, after twenty seconds, the display will flash whilst showing the last reading

#### Strobe output ranges

FPM ranges - Strobe output (or VLS output) can be varied from 3 to 99,999 FPM in four ranges.  
3 – 100 FPM  
30 – 1000 FPM  
300 – 10,000 FPM  
3000 – 100,000 FPM  
- A ten- turn potentiometer is provided for fine adjustment  
Resolution minimum -  $\pm 1$  rpm  
Accuracy - Typical  $<0.01\% \pm 1$  digit  
Timebase - 0.8 seconds update

Power requirements - 230V a.c.  
Fuse type - 1.6A Anti surgez 20 X 5 mm  
Max power rating - 4.2W

Standard kit – Includes an external LED strobe, Tachometer test lead and IEC mains lead with moulded plug

### Operation of the Instrument

#### Calibration of optical tachometers

- 1 Connect the LED strobe lead to the DIN **Output** socket. The plug is of a latching type, so the button must be depressed before trying to disconnect it. The LED strobe will fit directly onto the end of a Compact Instruments Ltd tachometer. Other models may be pointed at the LED strobe and the position adjusted until a reading is achieved and the on target LED is lit.
- 2 Set the **Display** switch to **Int**. The unit will now display the internally generated strobe frequency in FPM.
- 3 Using the **FPM Range** and **Fine** controls, the Tachometer under test can be checked for calibration at any required frequency.

#### Calibration of VLS remote optical sensors

- 1 Connect the VLS under test to the Calibrator **Ext** jack socket. Fit the LED strobe to end of the VLS and set the **Display** switch to **Ext**.
- 2 Check that the on-target LED on the calibrator and the green LED on the VLS are illuminated.
- 4 Using the **FPM Range** and **Fine** controls, the VLS under test can be checked for calibration at any required frequency. By switching the display between **Int** and **Ext** the calibration of the VLS can be verified.

#### Testing the remote input socket on a Compact Instruments Tachometer

- 1 The Calibrator is capable of simulating the output of a VLS remote optical sensor. Connect the appropriate test lead to the DIN **Output** socket and connect the jack plug to the Remote Sensor Socket on the receiving Tachometer.
- 2 Switch the tachometer on. The red **Ext Power** LED on the front panel should light to indicate that the external sensor supply is present.
- 3 Using the **FPM Range** and **Fine** controls, the Tachometer under test can be checked for calibration at any required frequency.

